
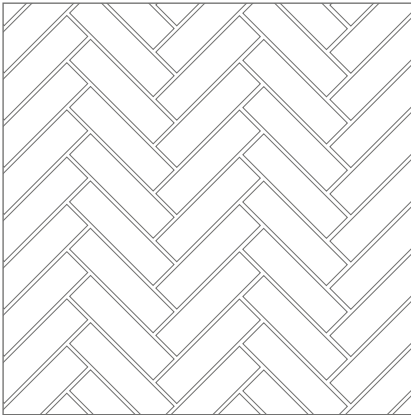


SUGGERIMENTI DI POSA ATELIER




INSTALLATION TIPS ATELIER

10x30 - 7,5x30

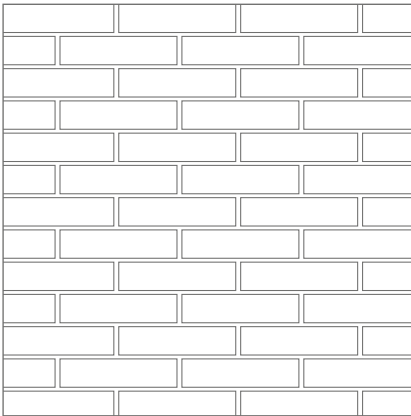



Fuga 3-5 mm / 3-5 mm gap

7,5x60

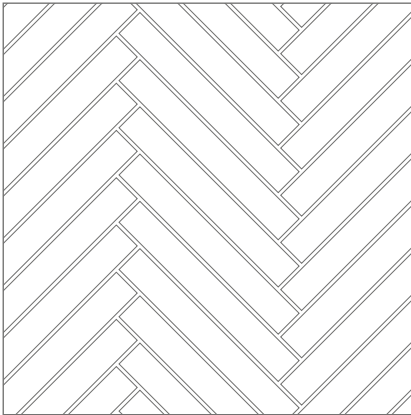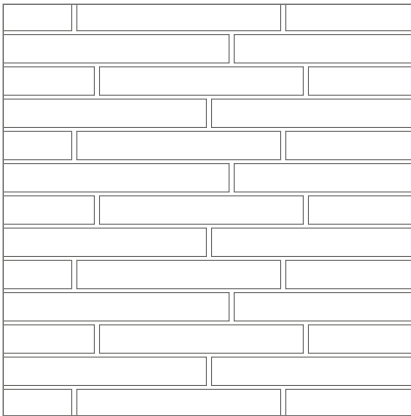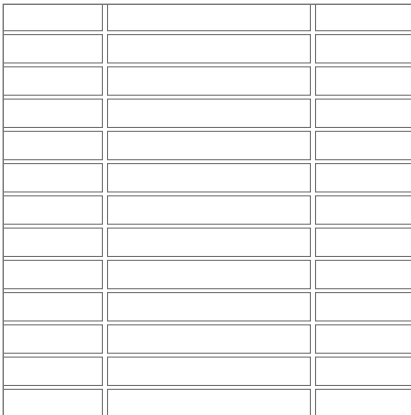


Fuga 3-5 mm / 3-5 mm gap

20x20

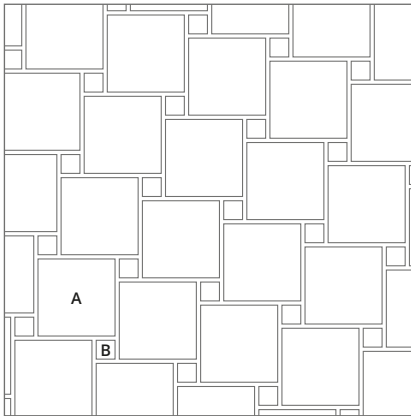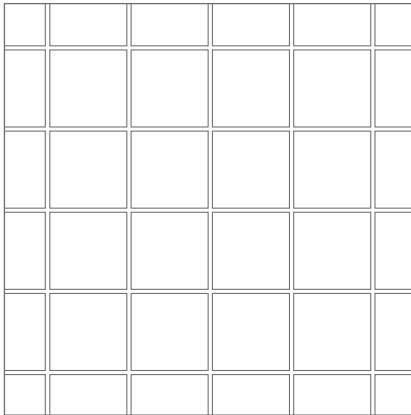



A: 94,1% B: 5,9%

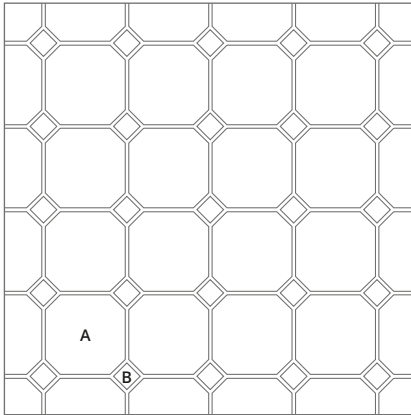


A: 93,75% B: 6,25%

Fuga 2-3 mm / 2-3 mm gap

Esagono 21,6x25

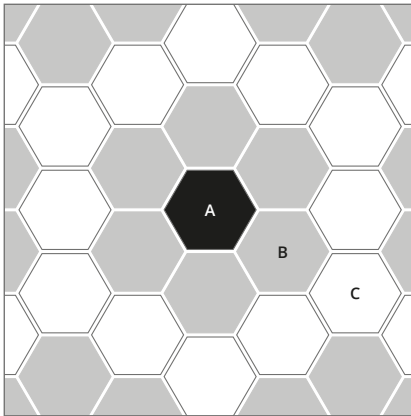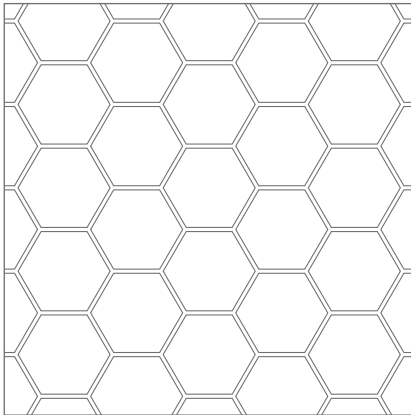

A: 8,33% B: 50% C: 41,67%

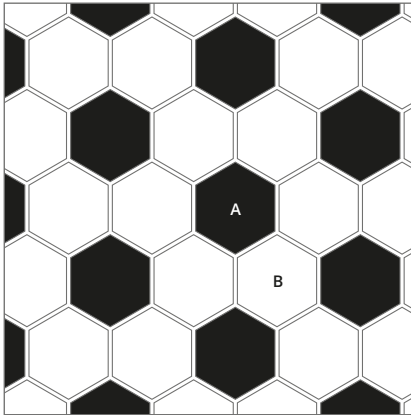

A: 33,3% B: 66,6%

Fuga 3-5 mm / 3-5 mm gap

